

Covershield

Ip65 Cylinder light unit




Screw the two plastic Terry clip to flat surface about 75mm in from each end of the cylinder light fitting

If you thinking of using an galvanised guard over the cylinder light. you will need the metal support bracket under the terry clips

Make sure you screw the terry clip on to a flat surface



Turn the cylinder light fitting on its sided and push into the terry clip to make it easier to fit cylinder light inside the terry clips

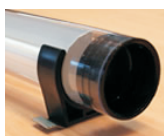

Once the cylinder light is inside the plastic terry clips. Simply turn the fitting to the direction you need the light to shine.




Make sure that the 2 Orings are properly in place when pushing the end cap

Installing the galvanised guard




The support bracket is used to hold the galvanise metal guard in place

Hold the galvanise metal guard against the support bracket.
Mark 1 galvanised wire on each corn of the guard next to the support bracket

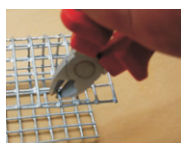

Cut out with a pair of wire cutters the 4 marked wires from the galvanised guard like in the picture. ending up with 4 small holes in the galvanised guard

Simply slip the galvanised metal guard over the cylinder light in to a slot at each end of the support bracket.

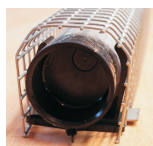

If needed use an zip tie across the galvanised guard at each end. for extra support